


Wall Mounted Touch Panel

Model No.: T21, T22, T24, T25

4 Zone/1-5 color/Glass touch panel/Color slide/Wireless remote 30m distance/AAA x 2 battery

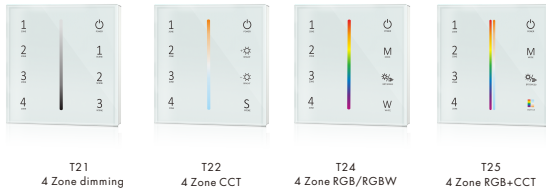

Features

- Touch panel 4 zone 1-5 color RF remote.
- Each zone can remote control multiple Skydance's 2.4G LED controllers.
- Ultra sensitive high strength glass touch panel with touch color slide in the middle.
- Smooth and accurate color adjustment by touching the color slide.
- Touch keys with chord tones and LED indicator.
- Free installation, no wiring, removable.
- AAA x 2 battery powered.
- White & Black glass panel available.


CE RoHS  LVD RED

Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(AAA x 2)
Working current	< 5mA
Standby current	< 20μA
Standby time	1 year
Remote distance	30m
Environment	
Operation temperature	Ta:-30℃~+55℃
Case temperature (Max.)	Tc:+65℃
IP rating	IP20


Safety and EMC	
EMC standard [EMC]	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard[LVD]	EN 62368-1:2020+A11:2020
Radio Equipment[RED]	ETSI EN 300 328 V2.2.2
Certification	CE, EMC, LVD, RED
Warranty	
Warranty	5 years
Weight	
Net weight	156g
Gross weight	192g

Mechanical Structures and Installations

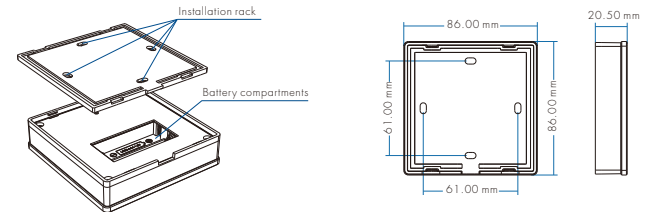

Installation diagram:

Typical base as below:

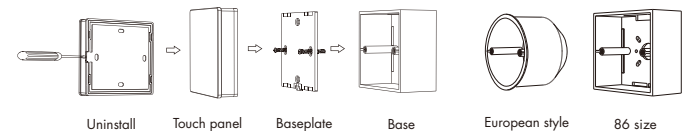

To fix the panel, two options are offered for selection:

Option 1: fix it on the wall with two screws.

Option 2: adhere it to the wall with pasteur.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press zone key of the touch panel.

The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match. The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:


Switch off the power of the receiver, then switch on power, repeat again. Immediately short press zone key 3 times on the touch panel. The light blinks 3 times means match is successful.

Delete:

Switch off the power of the receiver, then switch on power, repeat again. Immediately short press zone key 5 times on the touch panel. The light blinks 5 times means all matched remotes were deleted.

Key function

T21 Single color panel

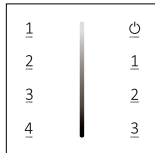

-  Turn on/off all zone light.
-  Brightness slide.
- 1 2 3** — Short press recall scene. Long press 2s to save the current state into 1/2/3.
- 1 2 3 4** — Short press turn on zone light and select zone simultaneously, long press 2s turn off zone light. 4 zone control separately or synchronously, each zone could control multiple receivers.

T22 Dual color panel




-  Turn on/off all zone light.
-  Color temperature.
-  Brightness +, 10 levels.
-  Brightness -, 10 levels.
- S** — Short press recall scene. Long press 2s to save the current state into the scene.
- 1 2 3 4** — Short press turn on zone light and select zone simultaneously, long press 2s turn off zone light. 4 zone control separately or synchronously, each zone could control multiple receivers.

T24 RGBW panel



-  Turn on/off all zone light.
-  Color slide.
- M** — Short press play 10 built-in mode, long press run mode-cycle.
-  Adjust dynamic mode speed or static color brightness, 10 levels.
- W** — Short press turn on/off W channel, long press adjust W channel brightness.
- 1 2 3 4** — Short press turn on zone light and select zone simultaneously, long press 2s turn off zone light. 4 zone control separately or synchronously, each zone could control multiple receivers.

T25 RGB+CCT panel

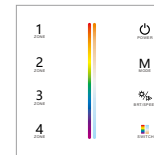

-  Turn on/off all zone light.
-  RGB color / Color temperature slide.
-  Switch between RGB color / Color temperature slide.
- M** — Short press play 10 built-in mode, long press run mode-cycle.
-  Adjust dynamic mode speed or static color brightness, 10 levels.
- 1 2 3 4** — Short press turn on zone light and select zone simultaneously, long press 2s turn off zone light. 4 zone control separately or synchronously, each zone could control multiple receivers.

Note: After touch power key to turn off light, long press power key for 5 seconds will turn on or turn off tone.

Safety information

- Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
- If no response from the receiver, please re-match the remote.
- Gently handle remote, beware of falling.
- For indoor and dry location use only.